


Comment:

File: tel1.dat : New Measurement

Scan Settings (1 Range)

Frequencies			Receiver Settings					
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp	OpRge
850MHz	950MHz	1MHz	120kHz	PK	20msec	Auto	OFF	60dB

Prescan Measurement: X PK  
Meas Time: see scan settings  
Subranges: 16  
Acc Margin: 10 dB

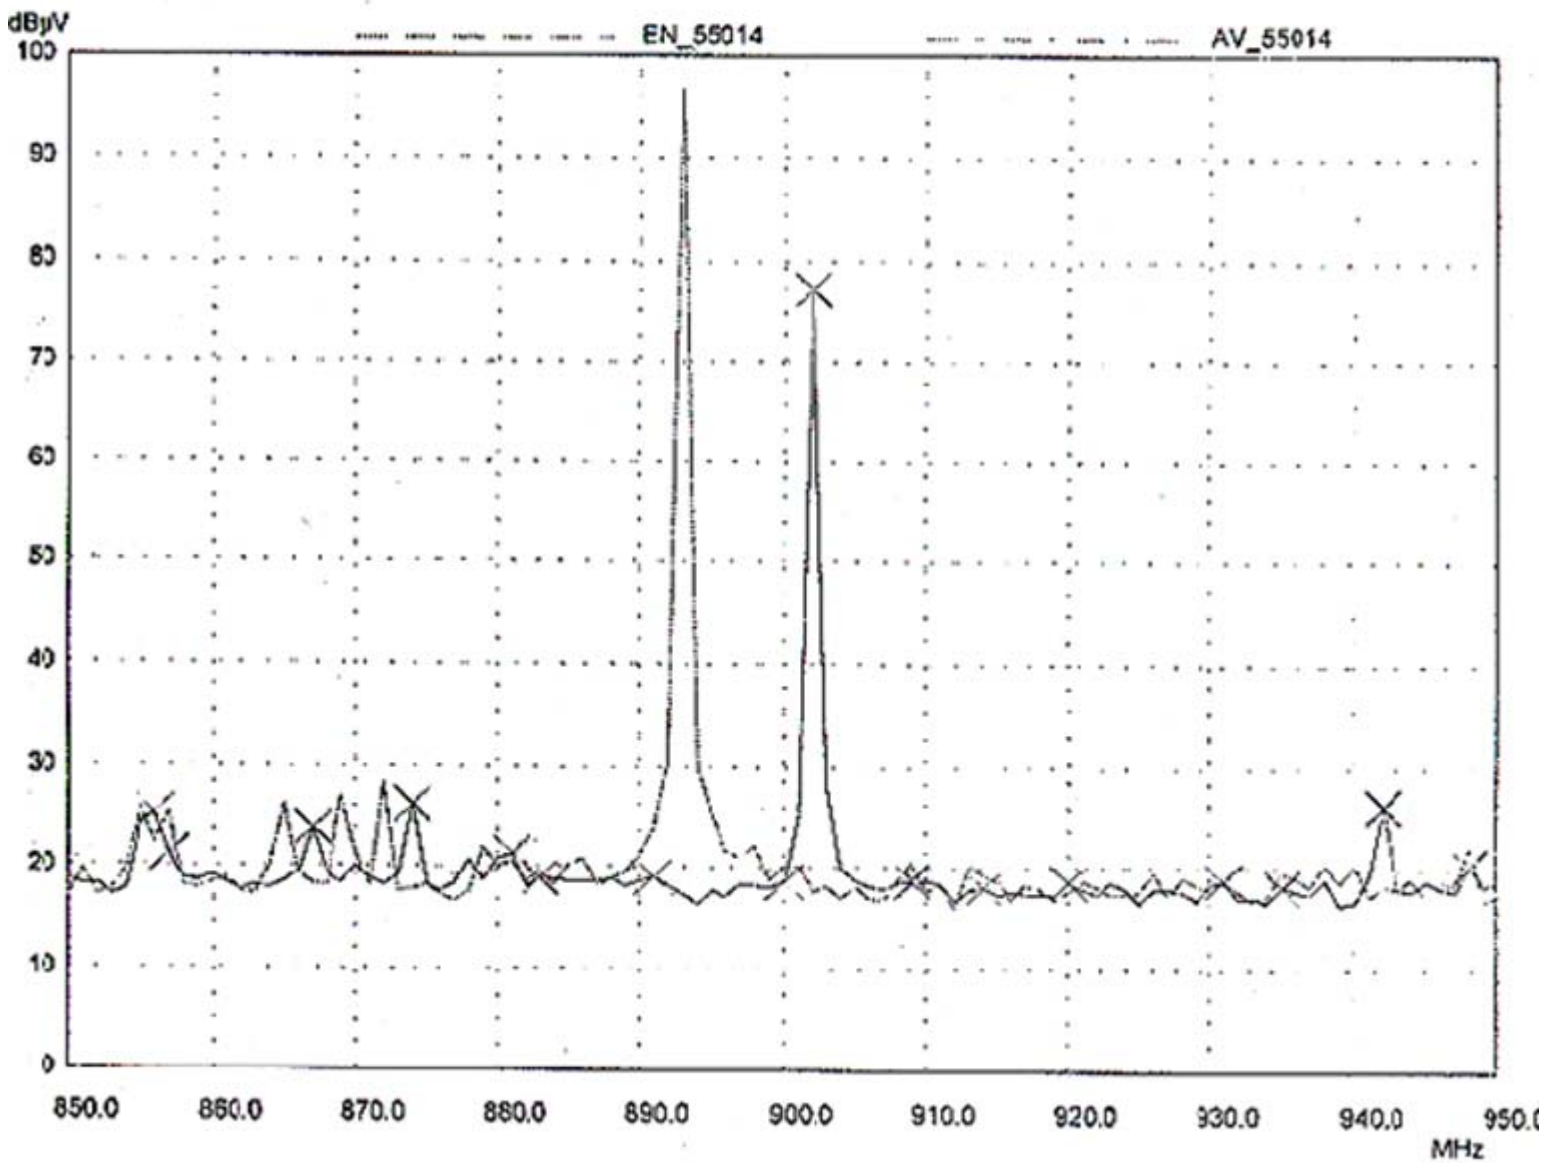

File: telef.dat : New Measurement

Scan Settings (1 Range)

Frequencies		Receiver Settings						
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp	CoRge
880MHz	940MHz	300kHz	120kHz	PK	20msec	Auto	OFF	60dB

Prescan Measurement: X PK  
Meas Time: see scan settings  
Subranges: 8  
Acc Margin: 25 dB

